Wall Mounted Touch Panel

Model No.: TW1, TW2, TW4, TW5

1-5 color/Glass touch panel/Touch color wheel/Wireless remote 30m distance/CR2032 battery



1 Zone Dimming

TW2 1 Zone CCT

TW4 1 Zone RGB/RGBW



TW 5 1 Zone RGB+CCT

CE RoHS emc LVD RED

• Touch panel 1-5 color RF remote.


Features

- Each Touch panel can remote control multiple RF 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel with touch color wheel in the middle.
- Touch keys with blue LED indicator.
- Free installation, no wiring, removable.
- CR2032 battery powered.
- White & Black available.

Technical Parameters

| Input and Output | | Safety and EMC | | Environment | |
|------------------|--------------------------|----------------------|---------------------------|-------------------------|---------------------|
| Output signal | RF(2.4GHz) | | ETSI EN 301 489-1 V2.2.3 | Operation temperature | Ta: -30 °C ~ +55 °C |
| Working voltage | 3VDC(CR2032) | EMC standard (EMC) | ETSI EN 301 489-17 V3.2.4 | Case temperature (Max.) | Ta: +65 °C |
| Working current | <8mA | Safety standard(LVD) | EN 62368-1:2020+A11:2020 | IP rating | IP20 |
| Standby current | <16µA | Radio Equipment(RED) | ETSI EN 300 328 V2.2.2 | Package | |
| Standby time |) year | Certification | CE,EMC,LVD,RED | Size | L100x W92 x H16.5mm |
| Remote distance | 30m (Barrier-free space) | Warranty | 5 years | Gross weight | 0.137kg |

Mechanical Structures and Installations

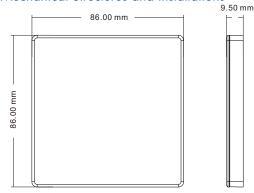


To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws. Option 2: adhere it to the wall with paster.

Note: If the LED indicator is not on when press key, it is due to dead battery or bad contact caused by multiple plugging, please replace the battery, or raise the battery shrapnel with a screwdriver

 Installation diagram:



Uninstall

Base

Match with RF LED controller (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the touch panel. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match.

The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

 
Match:

 
Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the touch panel. The light blinks 3 times means match is successful.


Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the touch panel. The light blinks 5 times means all matched remotes were deleted.







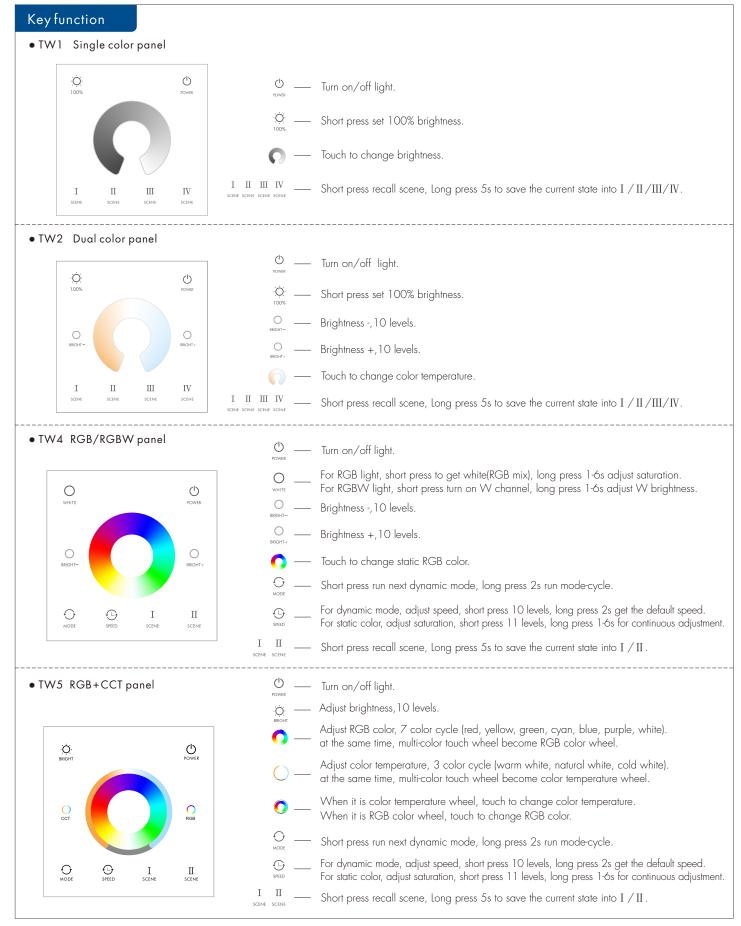

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery.
- When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.