

Ultrathin Touch Slide RF Remote Controller

Model No.: R11, R12, R13

Touch color slide/1-3 color/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix



CE RoHS LVD RED

Features

 
- Apply to single color, dual color or RGB LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	< 5mA
Standby current	< 10 μ A
Standby time	1 year
Remote distance	30m(Barrier-free space)
Environment	
Operation temperature	Ta: -30 $^{\circ}$ C ~ +55 $^{\circ}$ C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	EN301 489, EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE, EMC, LVD, RED
Warranty	
Warranty	5 years
Weight	
Net weight	0.024kg
Gross weight	0.064kg

Mechanical Structures and Installations

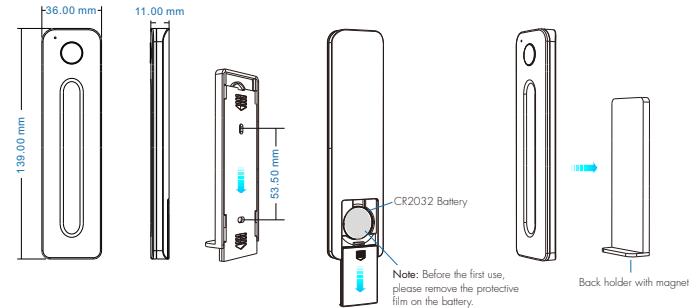

To fix the remote, three options are offered for selection:

Option 1: stuck the remote on any metal surfaces directly.

Option 2: fix the remote's back holder on the wall with two screws.

Option 3: adhere the remote's back holder to the wall with pastar.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

 
Switch off the power, then switch on power again, immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:


Switch off the power, then switch on power again, immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function


• R11 1 zone dimming remote

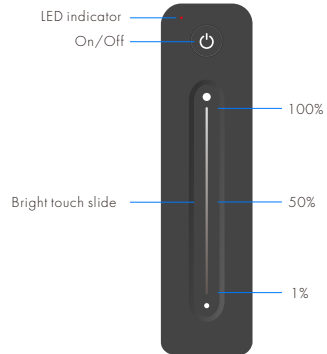

• R12 1 zone CCT remote

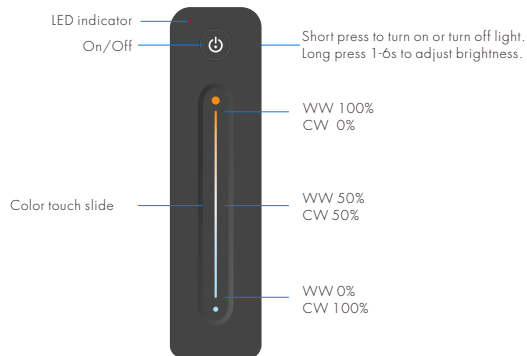 

• R13 1 zone RGB remote

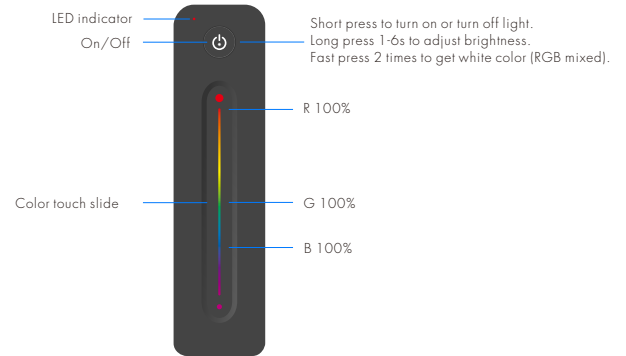 

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.