# 4 Zone Dimiming and CCT RF Remote Controller

## Model No.: RA1, RA2

4 zone/16 key/Wireless remote 30m distance/AAA x 2 battery





4 zone dimmina

C€ RoHS amc LVD RED

## Features

- Apply to single color or dual color LED controller.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.

## Technical Parameters

#### Input and Output Output signal RF(2.4GHz) Working voltage 3VDC(AAAx2) Working current <5mA Standby current < 2µA Standby time 2 year Remote distance 30m(Barrier-free space)

5 vears

Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

#### Environment

IF

Operation temperature	Ta: -30°C ~ +55°C
Case temperature (Max.)	Tc:+85°C
<sup>o</sup> rating	IP20

## Mechanical Structures and Installations



## Key function

### • RA1 4 zone dimming remote

-All On/Off ( )Brightness+ Brightness-Briahtness+ Brightness-Zone 1/2/3/4 on one 1/2/3/4 off S1 S2 S3 -----3 Scene Turn on/off all 4 zone light. Zone 1/2/3/4 on/off: Turn on/off zone light, at the same time, select current zone.

Short press multiple zone on key fastly, will select multiple zone synchronously.

### Brightness+/-:

All on/off:

Adjust current selected zone brightness.

Short press 10 levels, long press 1-6s for continuous 256 levels adjustment. Scene 1/2/3:

Short press recall the scene, long press 2s save current state into S1/2/3. the LED indicator will light up longer when save OK. 4 zone recall or save synchronously.

Warranty

Warranty



All on/off:

Turn on/off all 4 zone light.

### Zone 1/2/3/4 on/off:

Turn on/off zone light, at the same time, select current zone.

Short press multiple zone on key fastly, will select multiple zone synchronously.

#### Brightness+/-:

Adjust current selected zone brightness.

Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

#### Color temperature+/-:

Adjust current selected zone color temperature.

Short press 11 levels, long press 1-6s for continuous 256 levels adjustment.

(
1
(

11 Cool White WW 0% CW 100%

### Scene 1/2/3:

Short press recall the scene, long press 2s save current state into \$1/2/3. the LED indicator will light up longer when save OK. 4 zone recall or save synchronously. End user can choose the suitable match/delete ways. Two options are offered for selection:

Match:
Short press match key,
immediately press zone on key on the remote.
The LED indicator fast flash a few times
means match is successful.

Use the controller's Match key

Match Remote Control (two match ways)

### Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

### Use Power Restart

Match: Switch off the power, then switch on power again, immediately short press zone on key 3 times on the remote. The light blinks 3 times means match is successful.

### Delete:

Switch off the power, then switch on power again, immediately short press zone on key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

## Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery.
  - When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.